 


# Carver Hydraulic Press

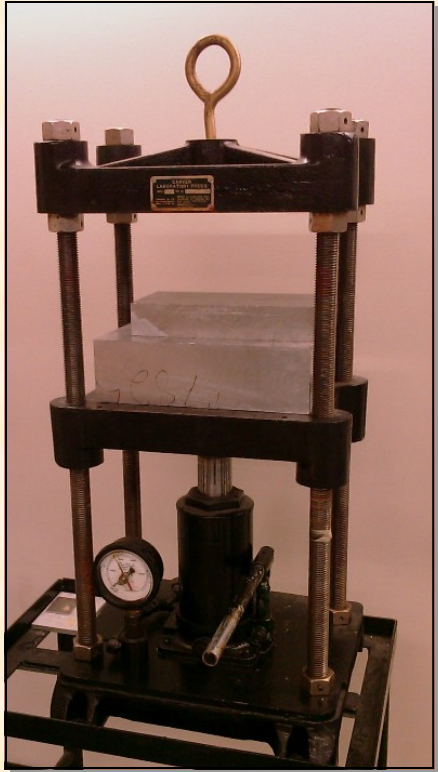


## Safety Precautions

- When in doubt, ASK!
- ALWAYS inspect press for damage before use
- DO NOT exceed rated capacity of press
- DO NOT apply off-center loads
- DO NOT exceed maximum stroke of press
- When not in use release pressure and clean equipment

## Off-Center Load


Projectile Hazard

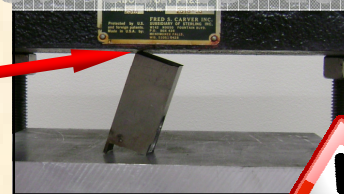

## Operating Instructions

- Center workpiece on arbor plate
- Apply pressure until workpiece is just contacting top plate
- Re-check alignment and apply pressure
- Release pressure and clean equipment
- WHEN IN DOUBT ASK.

## Key Components

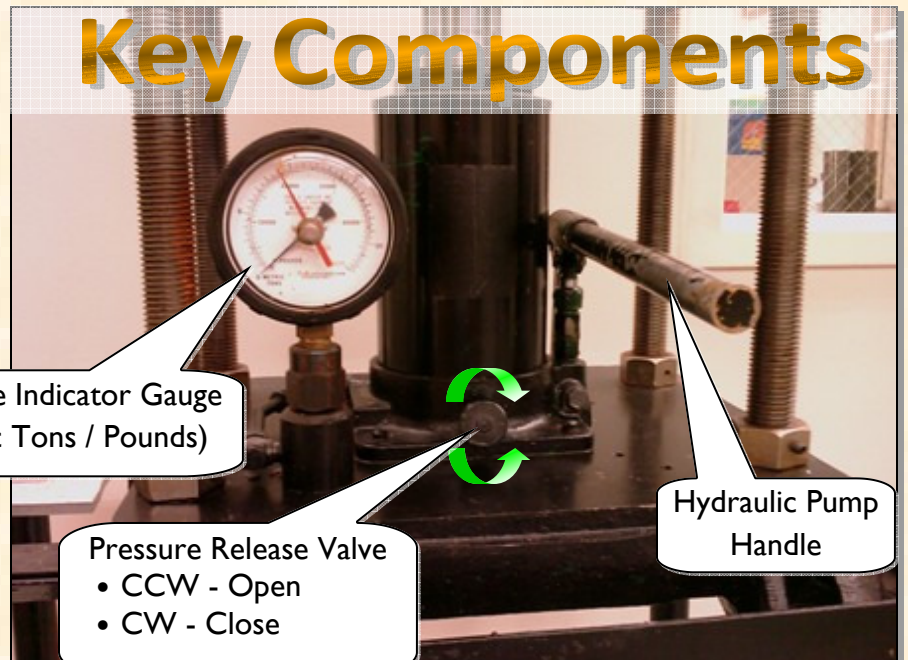

Pressure Indicator Gauge  
(Metric Tons / Pounds)

Pressure Release Valve  
• CCW - Open  
• CW - Close

Hydraulic Pump  
Handle