



Pre-CAD Plan


Extruded Boss/Base, FRONT Plane

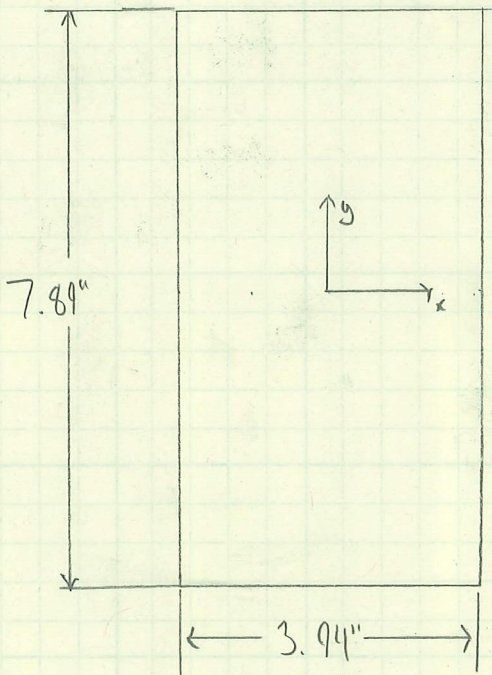

Center Rectangle, started from origin

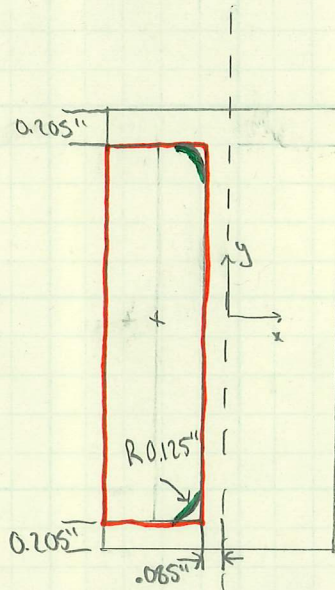

One more rectangle with center horizontal to origin. Add sketch fillets on internal corners

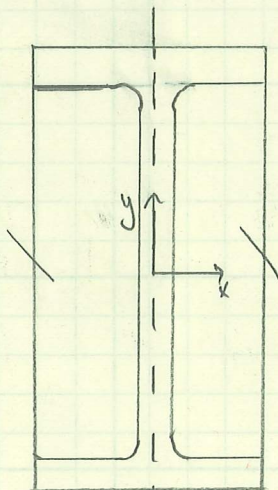

Mirror over central axis, trim away excess lines

Exit sketch and extrude to a depth of 3".